

This Page Is Inserted by IFW Operations
and is not a part of the Official Record

BEST AVAILABLE IMAGES

Defective images within this document are accurate representations of the original documents submitted by the applicant.

Defects in the images may include (but are not limited to):

- BLACK BORDERS
- TEXT CUT OFF AT TOP, BOTTOM OR SIDES
- FADED TEXT
- ILLEGIBLE TEXT
- SKEWED/SLANTED IMAGES
- COLORED PHOTOS
- BLACK OR VERY BLACK AND WHITE DARK PHOTOS
- GRAY SCALE DOCUMENTS

IMAGES ARE BEST AVAILABLE COPY.

**As rescanning documents *will not* correct images,
please do not report the images to the
Image Problem Mailbox.**

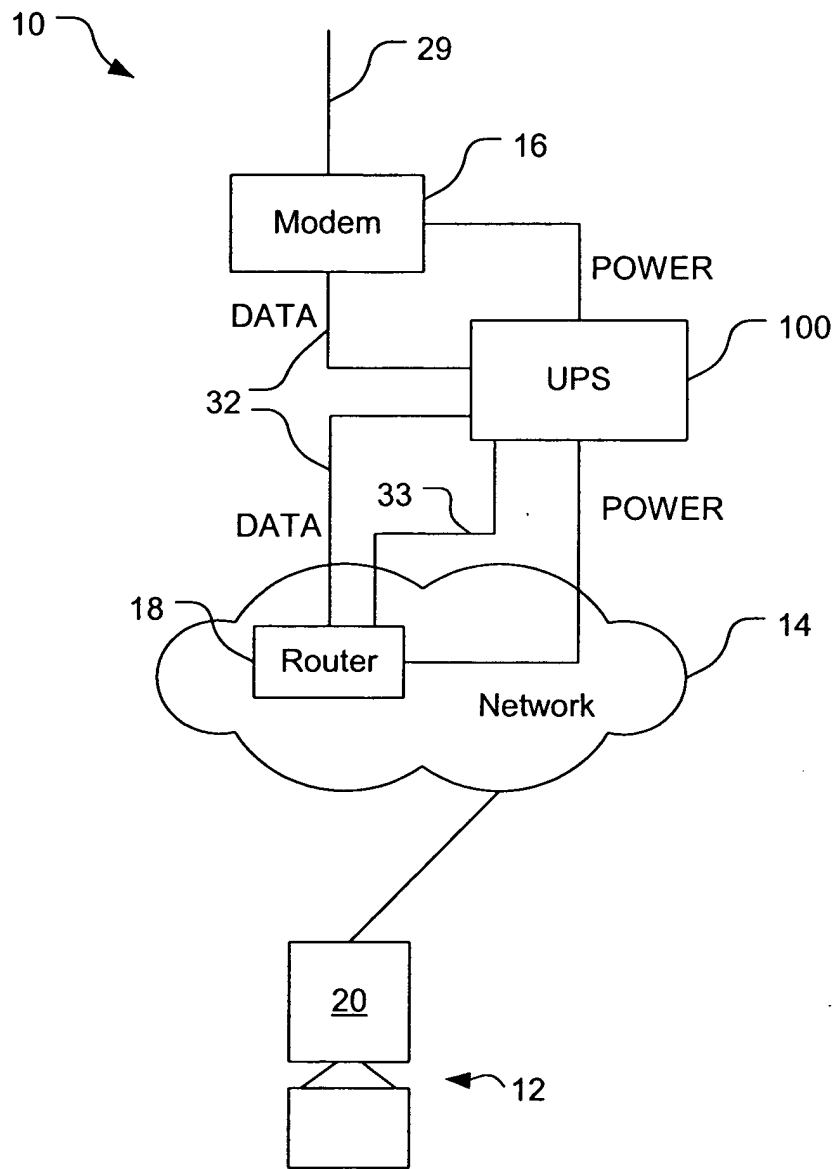


FIG. 1

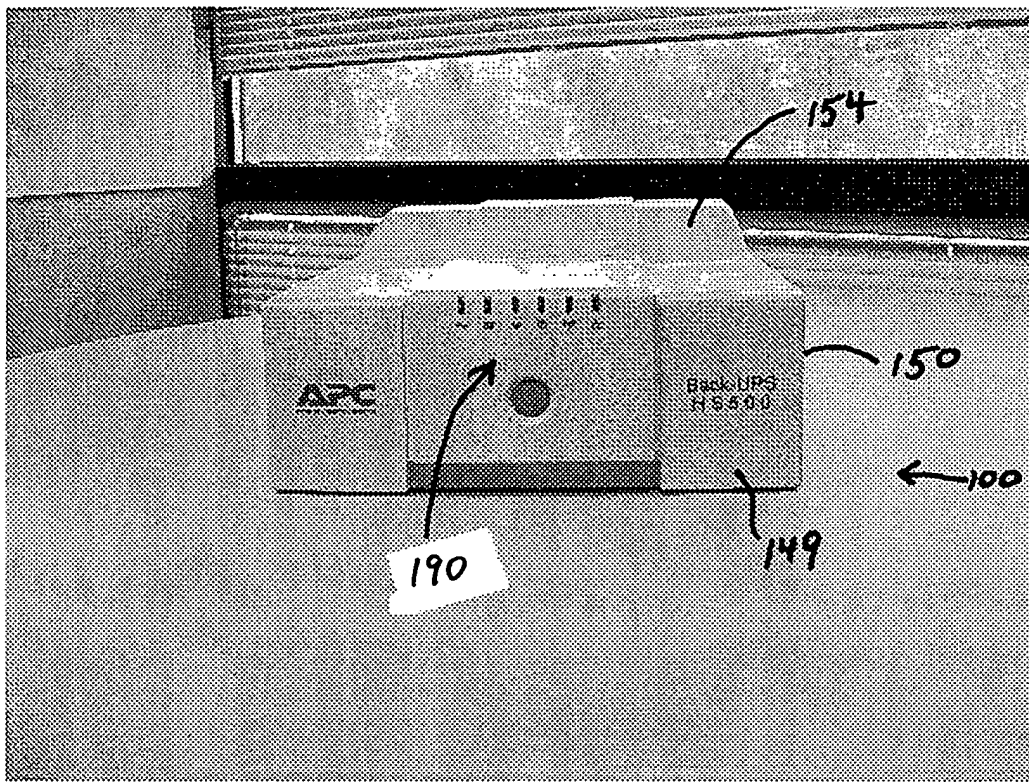


FIG. 2

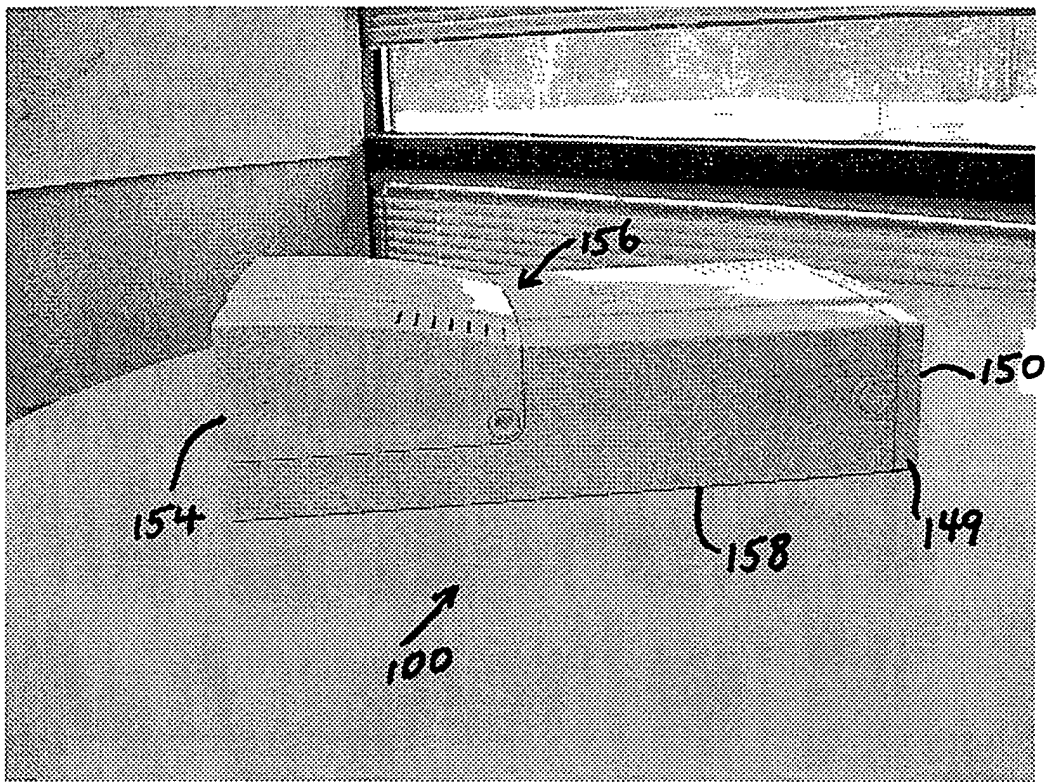


FIG. 3

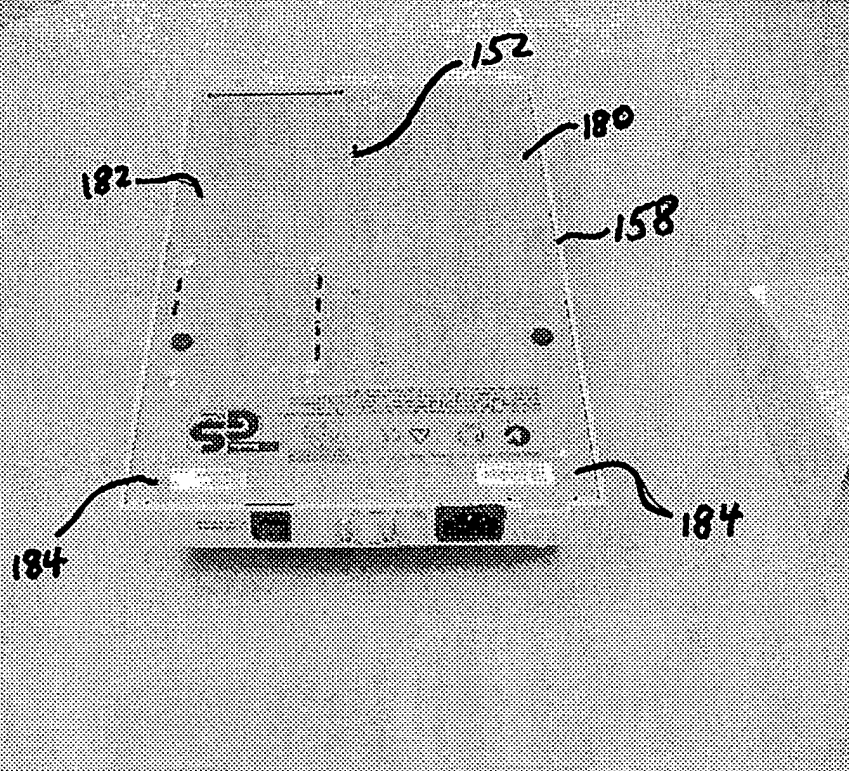


FIG. 4

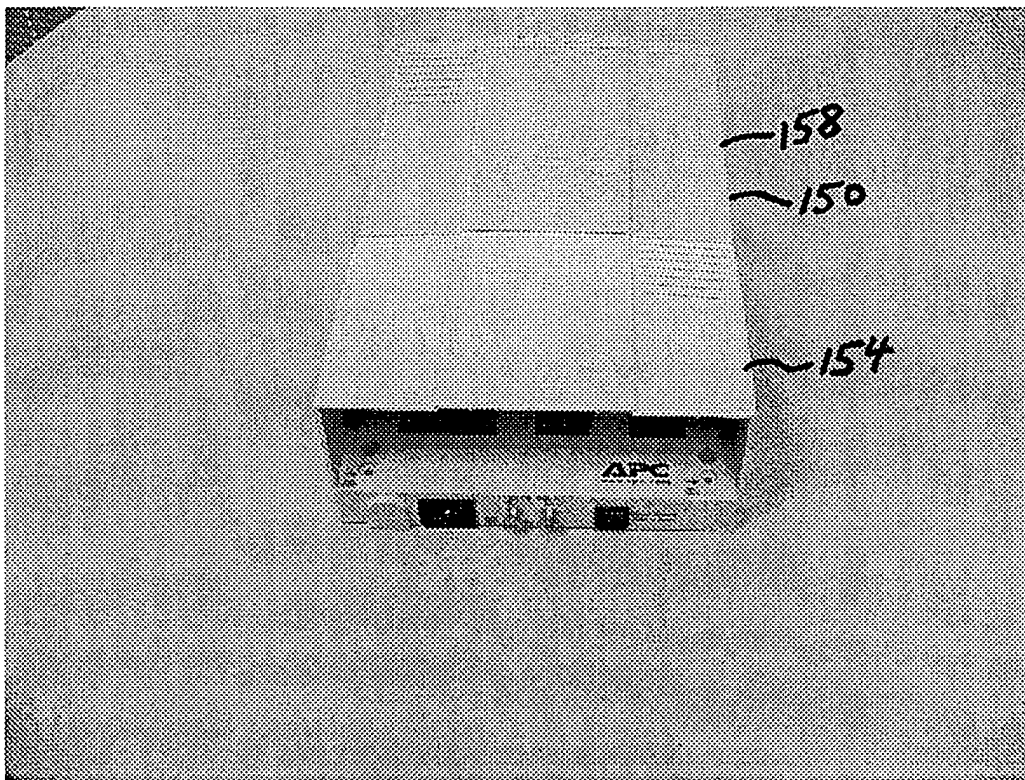


FIG. 6

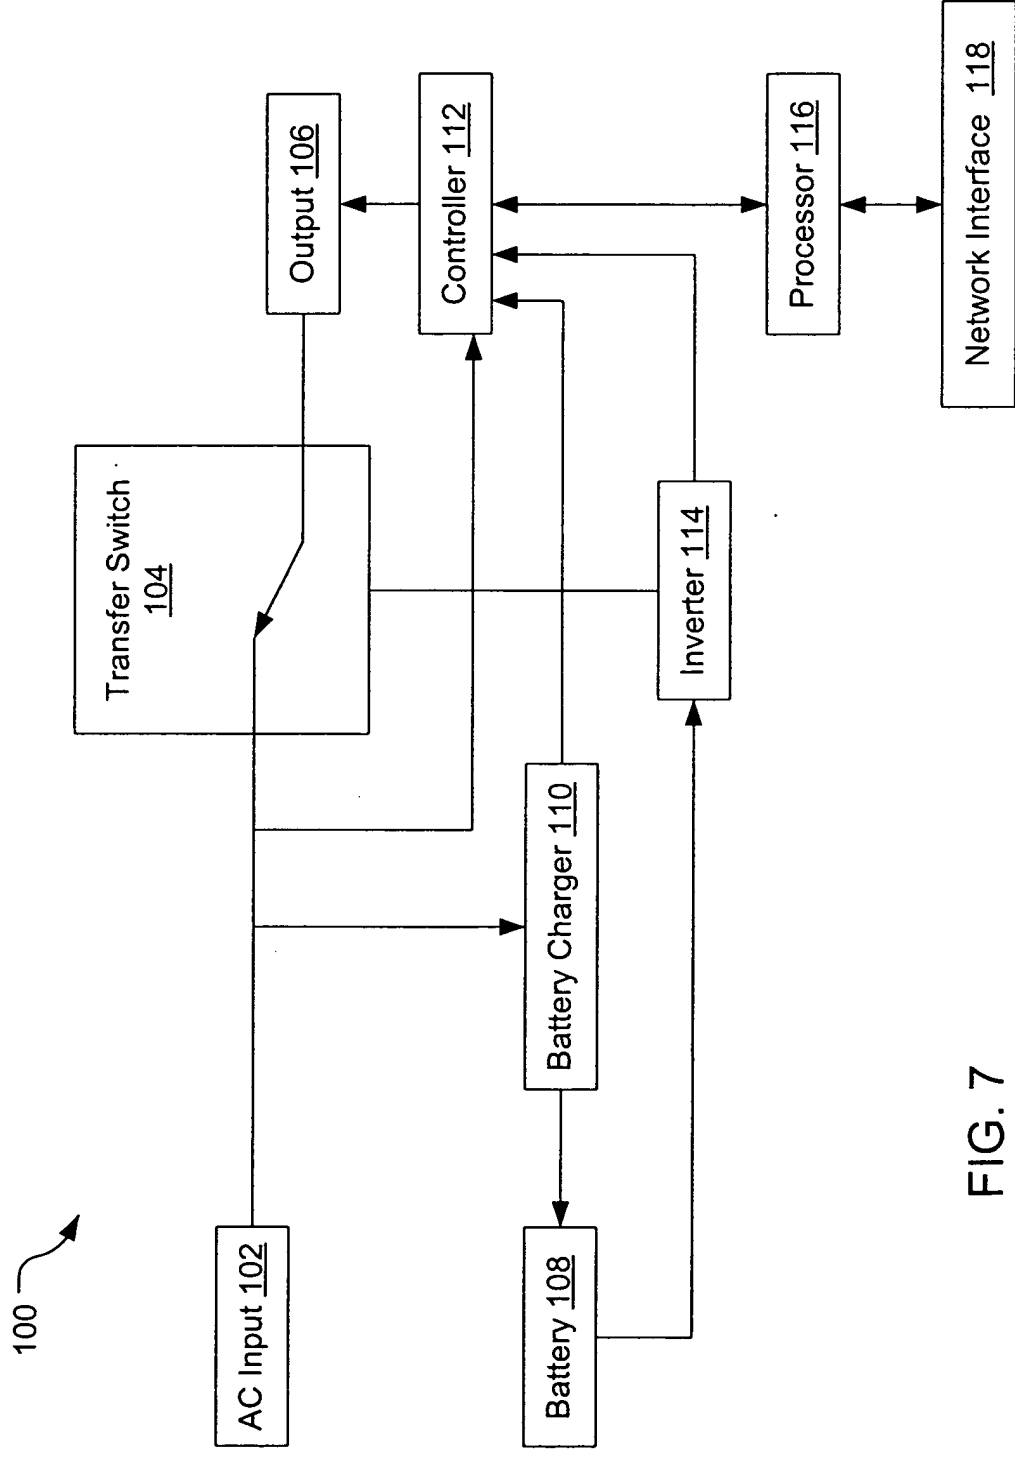


FIG. 7

30

APC Back-UPS HS 500 - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Stop Search Favorites Media

Address <http://159.215.32.160/>



APC Back-UPS HS 5

Status

Configuration

Maintenance

About

Logoff

Power Source On Line

Battery Capacity 100 %

Available Runtime 54 minutes

39

Current Status

42

Battery status:

Charged 48

Last transfer to battery was caused by:

No Transfer 50

Result of last self-test is:

Passed 52

44

46

Load on Battery Backup

Your battery backup is currently providing:

0 Watts 54

Status Page

Fig. 8

Status Page

Internet



APC Back-UPS HS 5

Status

Configuration

Maintenance

About

Logoff

Sensitivity

☐ High ☒ Medium ☐ Low

Audible Alarm

☒ Enable ☐ Disable

Transfer Points

Your battery backup will intervene if AC utility voltage goes above :

Your battery backup will intervene if AC utility voltage goes below :

139 Volts

92 Volts

Outlet Control

80 →	<input checked="" type="radio"/> On	<input type="radio"/> Off	<input type="radio"/> Reboot	Output 1
82 →	<input checked="" type="radio"/> On	<input type="radio"/> Off	<input type="radio"/> Reboot	Output 2
84 →	<input checked="" type="radio"/> On	<input type="radio"/> Off	<input type="radio"/> Reboot	Output 3

Apply

Reset

Configuration Page

Fig. 9



Battery Self Test

Test Now 90

Test results are displayed on the status page.

Update Battery Replacement Date

Update Now 92

Perform this operation only upon battery replacement

Change Username and Password

Enter New Username

Enter New Password

Update Now

Valid entries are 20 or fewer characters in length.

Restore Factory Defaults

Restore Now 94

Restore battery backup settings back to their factory default values.

Fig. 10

34

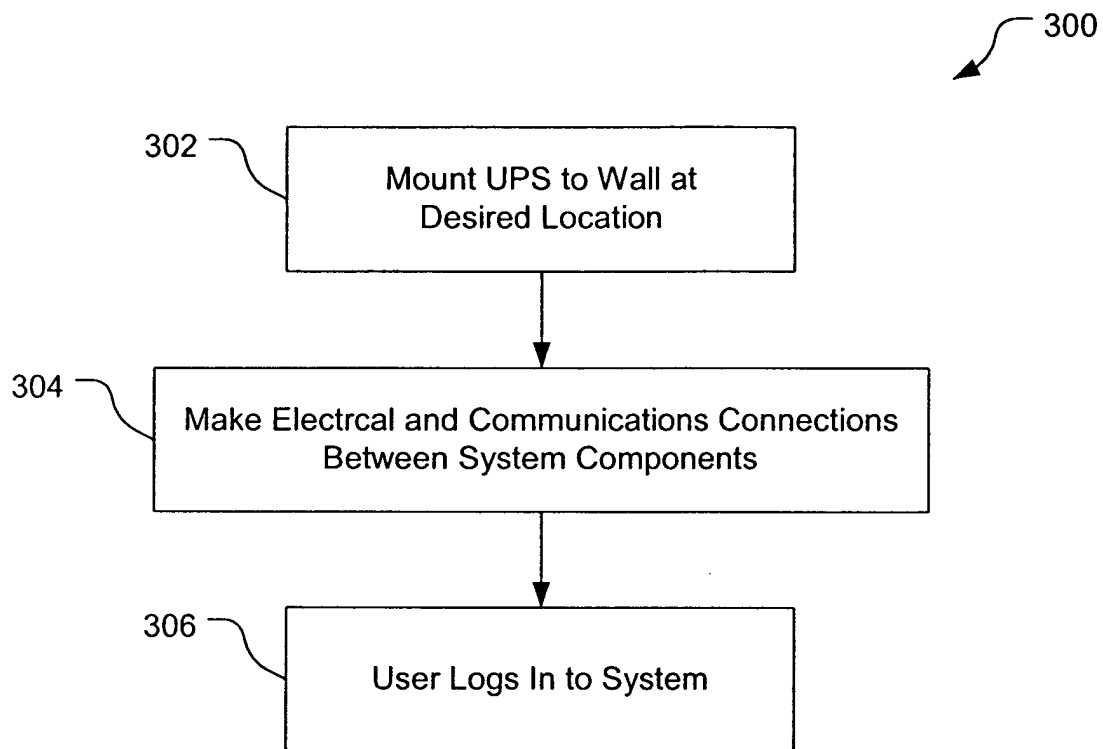


FIG. 12

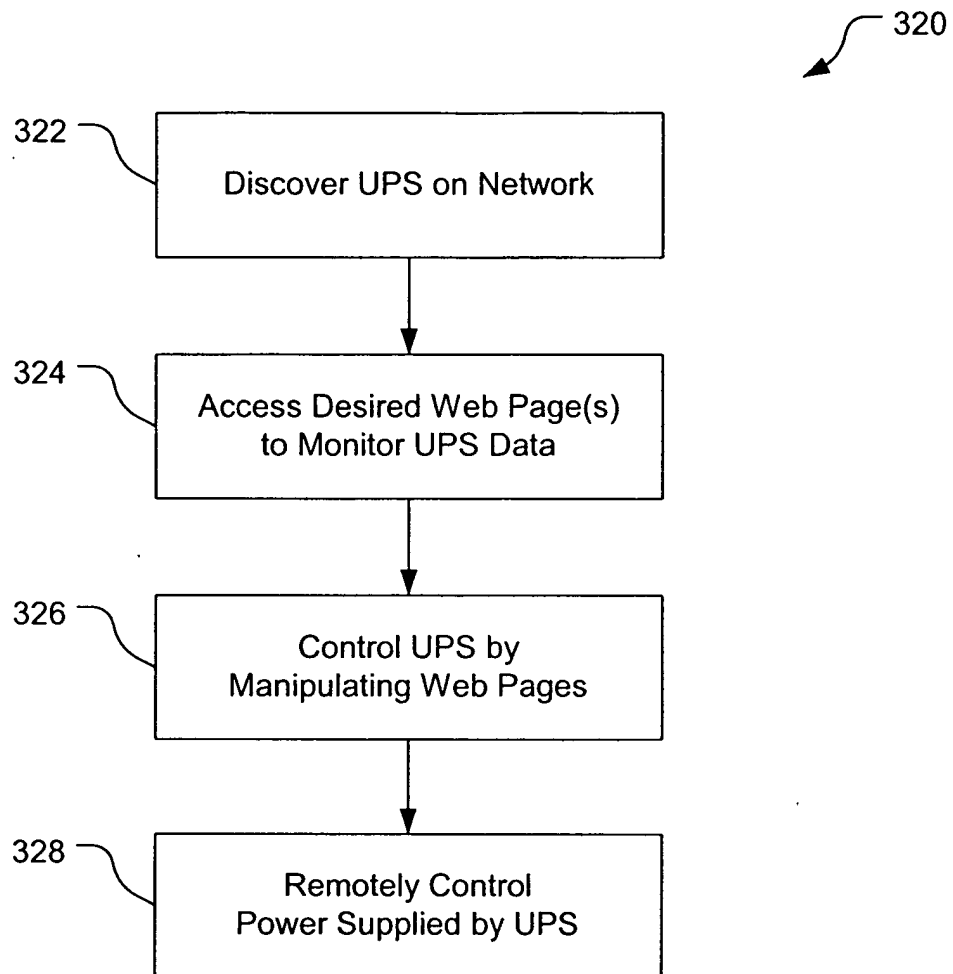


FIG. 13